
CRL8072 NX1K Operating Guide

Ride-On Scrubber Dryer




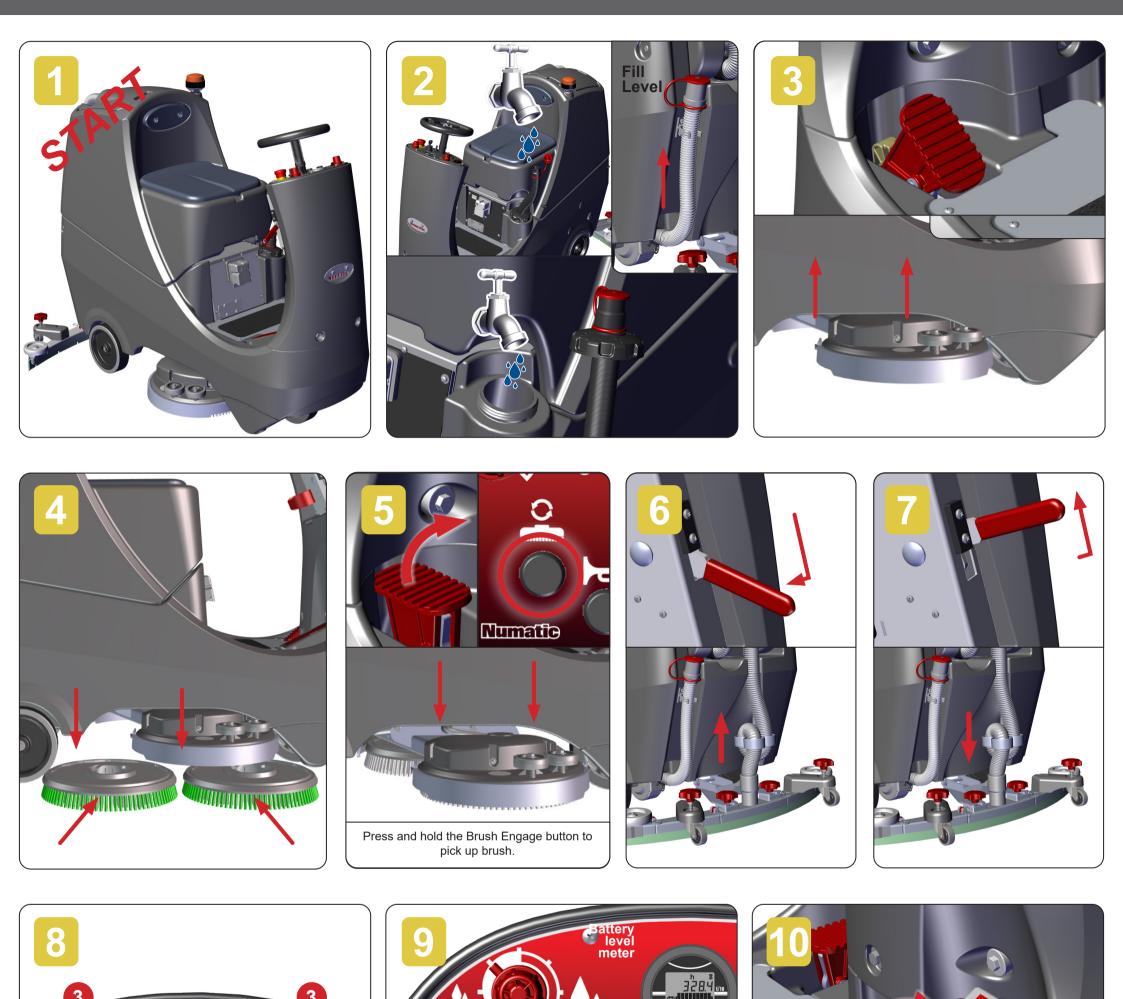

To start the machine, turn the key (1) set the direction switch to forward (2) set the speed control and water flow rate(3).



With the machine running press Vacuum On/Off button

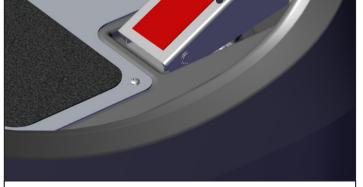

Press the accelerator peddle to operate

numatic.com

(+44 (0)1460 68600



FloorCare

Numatic.com





 $\sqrt{\sqrt{2}}$

©Numatic International Limited 2023. Specification subject to change without prior notice. numatic.com