


TRG720 Operating Guide

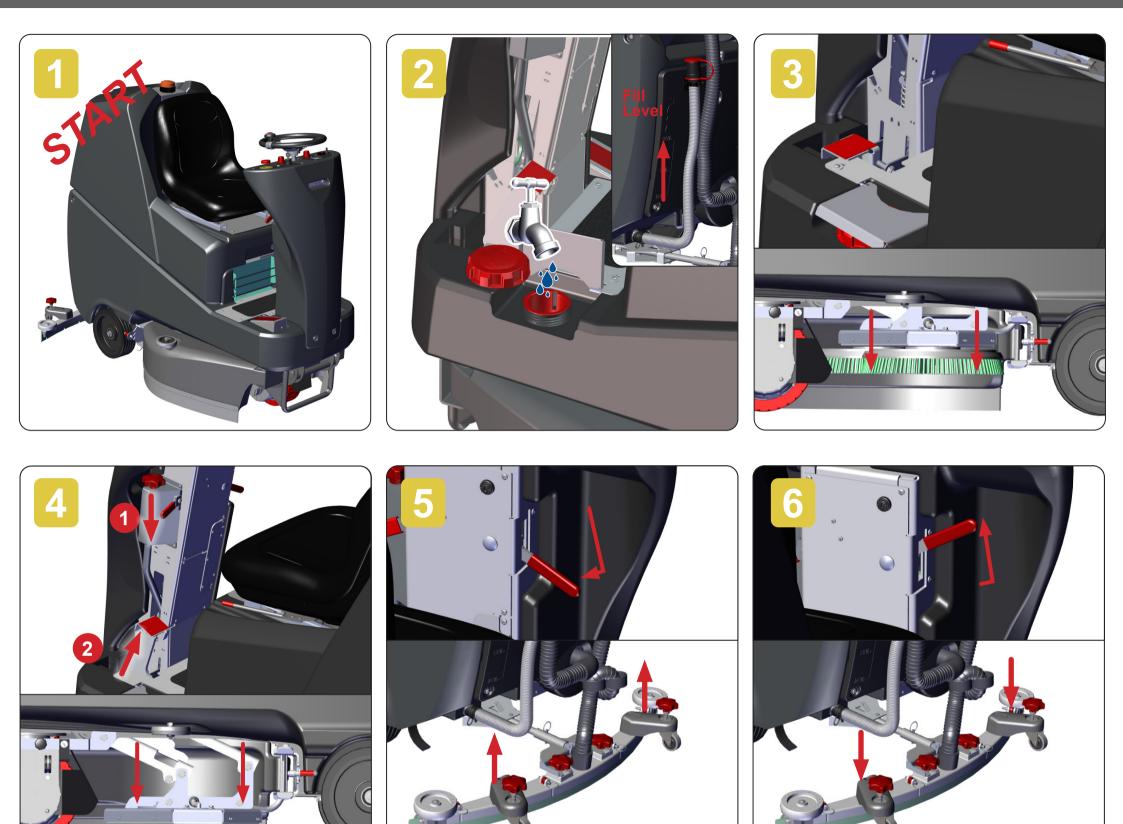

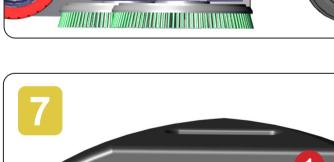



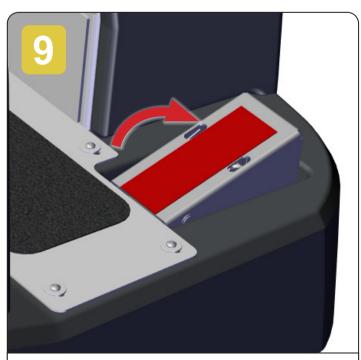



To start the machine, turn the key (1) set the direction switch to forward (2) set the speed control and water flow rate(3).

With the machine running press Vacuum On/Off button.

then press the accelerator peddle to operate

(f) numatic.com (1+44 (0)1460 68600



Numatic.com

