

4045/4055NX1K Operating Guide


Compact and Cordless Scrubber Dryer




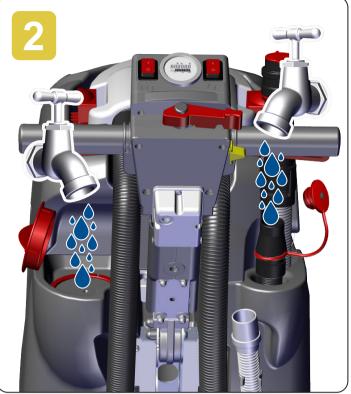


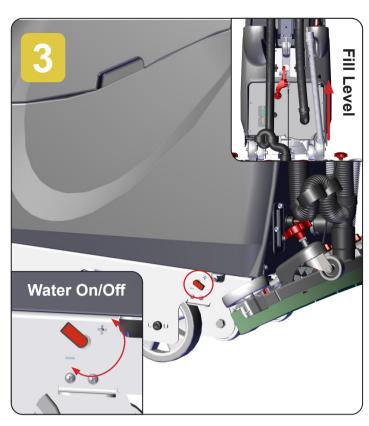




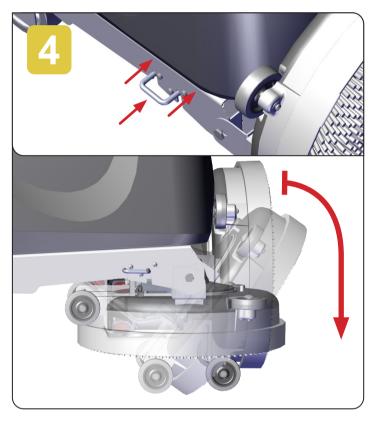

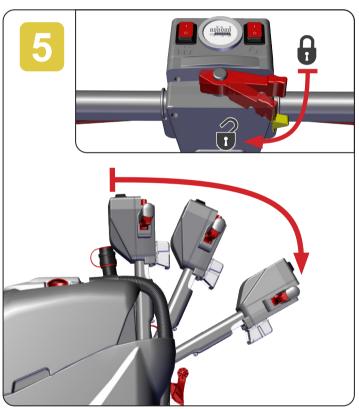

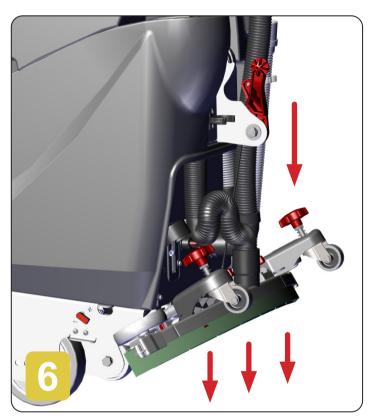



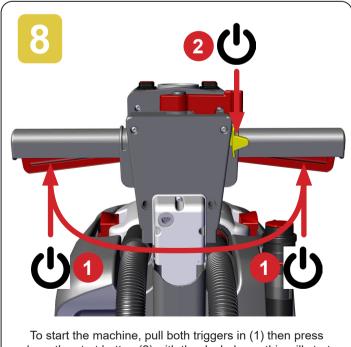

down the start button (2) with the deck down, this will start the brush spinning.

