


TB3045/4045/4055 Operating Guide Compact and Cordless Scrubber Dryer

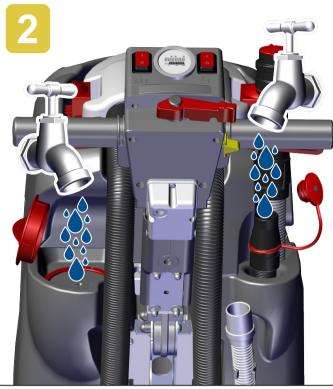


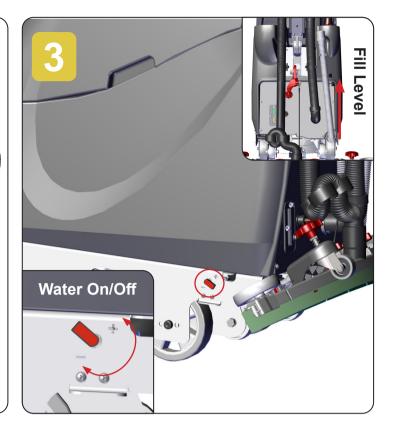

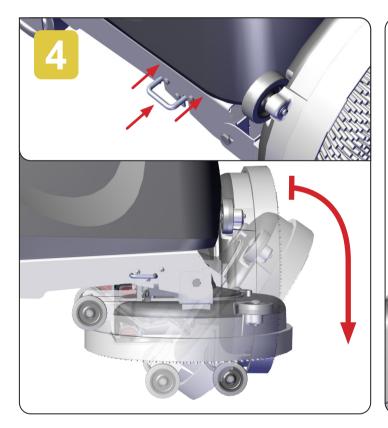



FloorCare




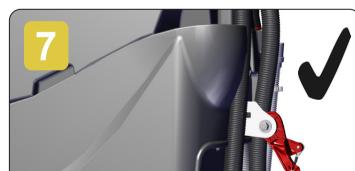




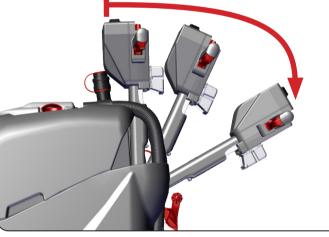

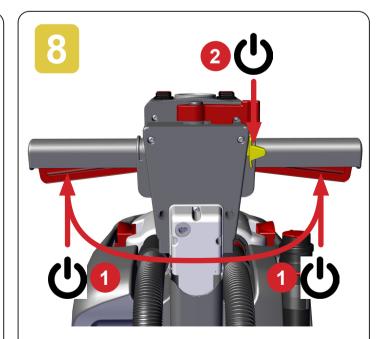

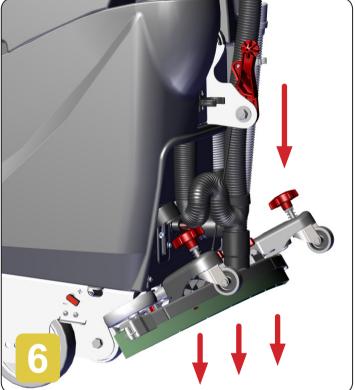

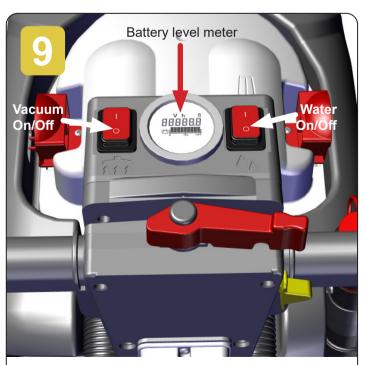



To start the machine, pull both triggers in (1) then press down the start button (2) with the deck down, this will start the brush spinning.

With the machine running press the Water On/Off button and the Vacuum On/Off button as required.

mumatic.com **(**+44 (0)1460 68600





