 


CV570
CVD 570
CV 900
CVD 900

Numatic

 
 
 
 
 
 
 
 
 
 
 
numatic.com

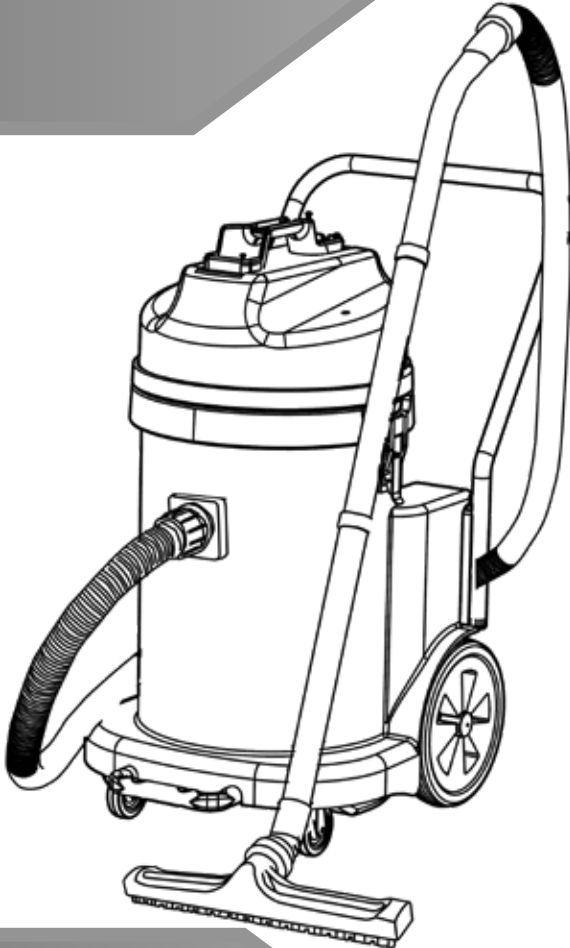


Original Instructions

CAUTION, Read the Instructions before using the machine.

CV / CVD 900 Drum Assembly

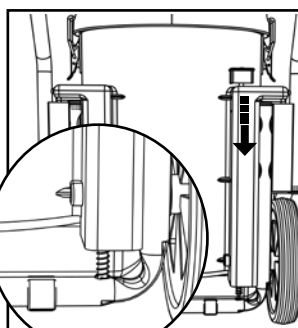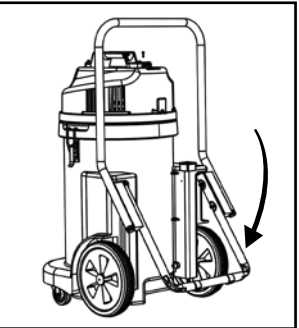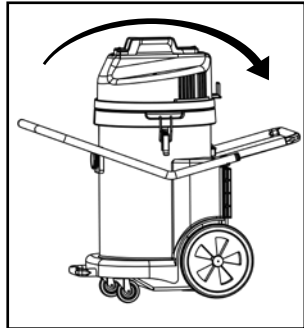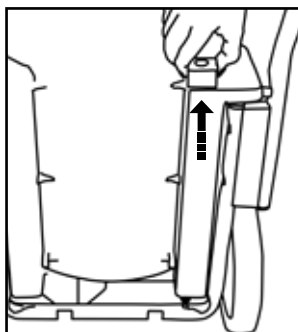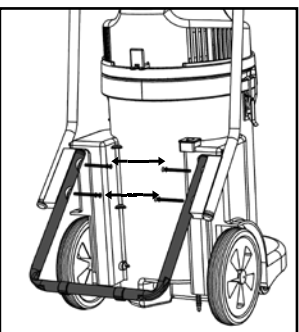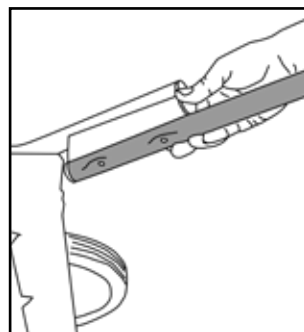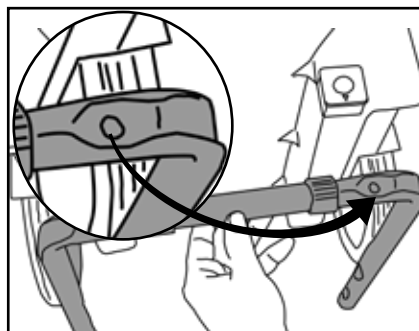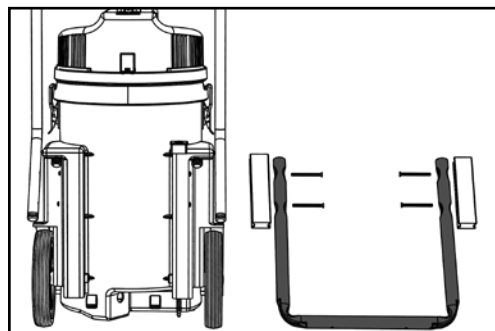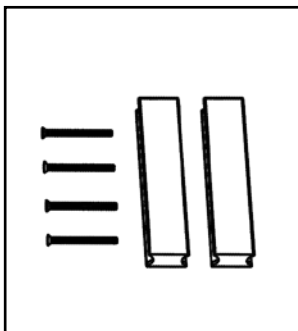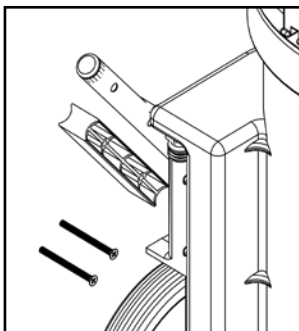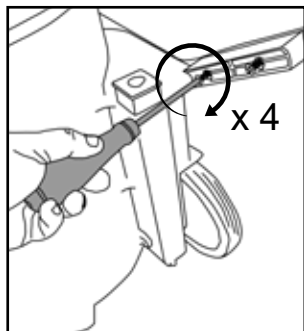


Using the Machine

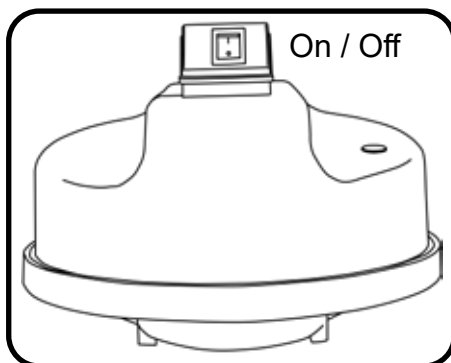 






Warning

You must make sure all waste material has been emptied from machine AFTER use.
Make sure all filters are clean BEFORE every use.


 
Emptying the Machine

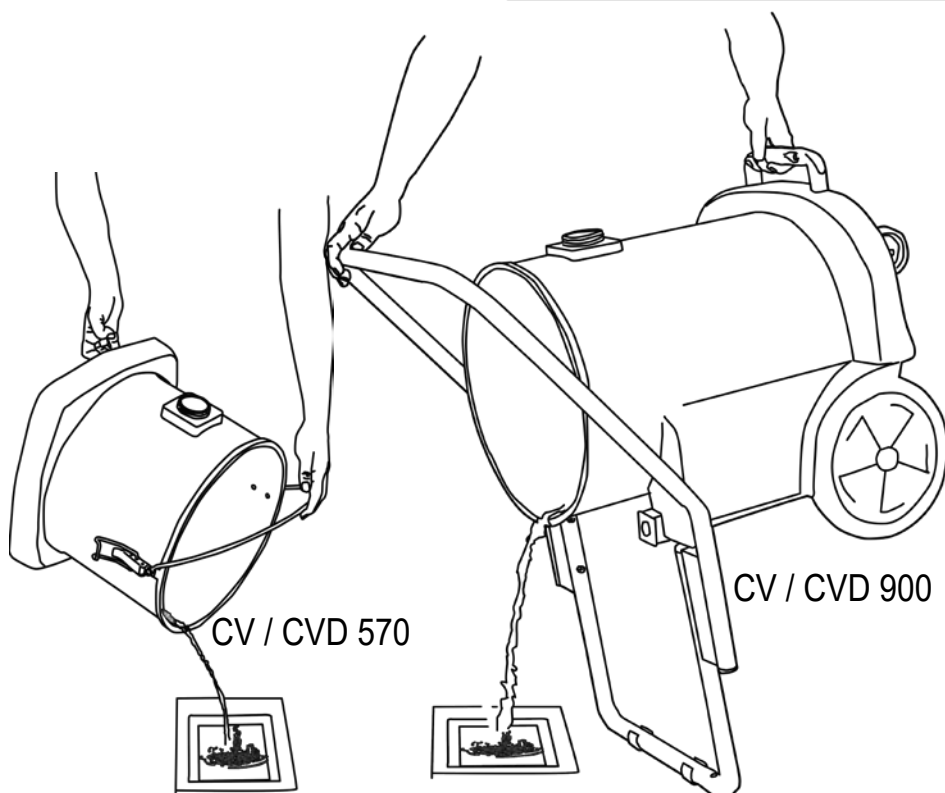












Cleaning the Filters

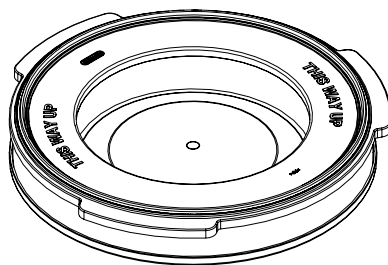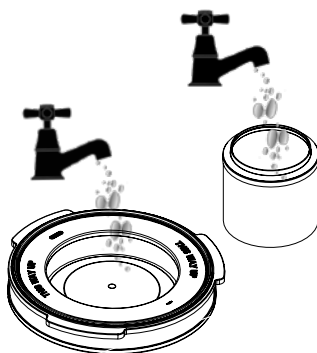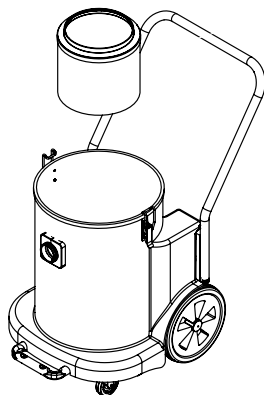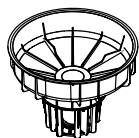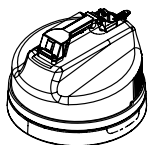     

  Do not replace filter until
completely dry!

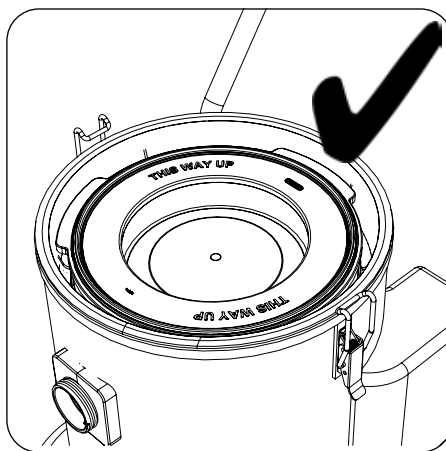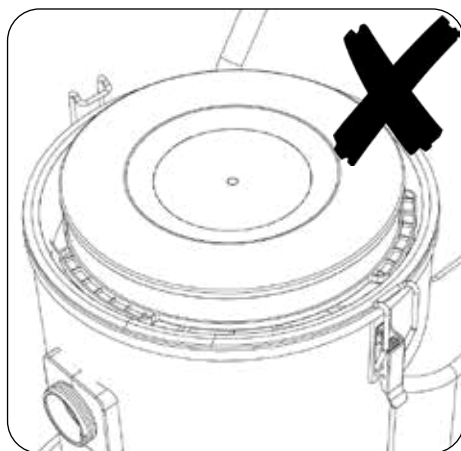


Changing the Cable

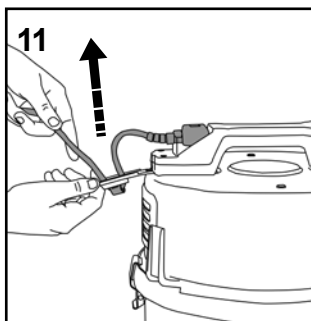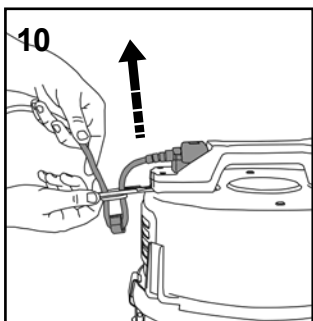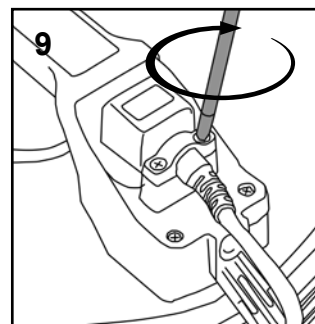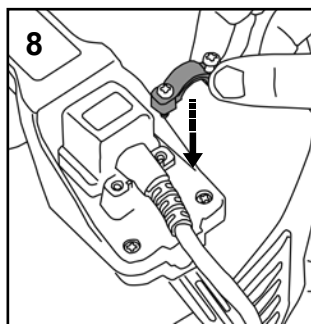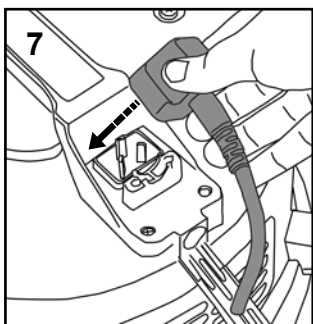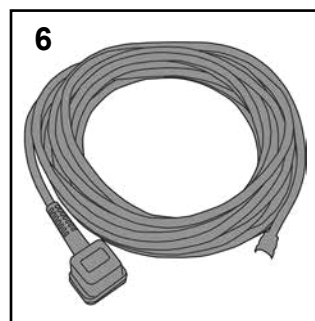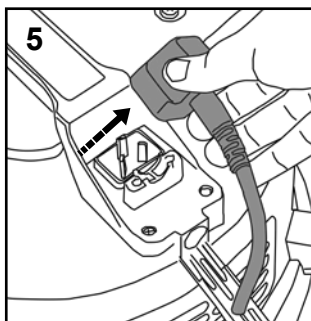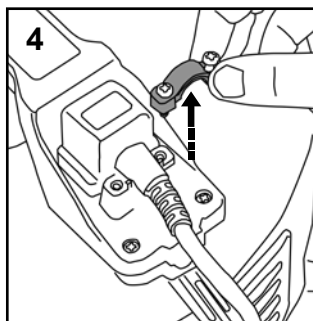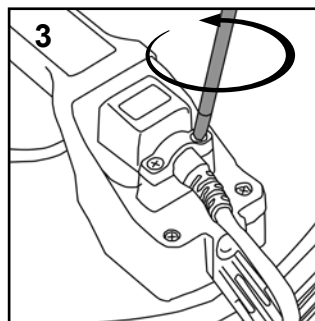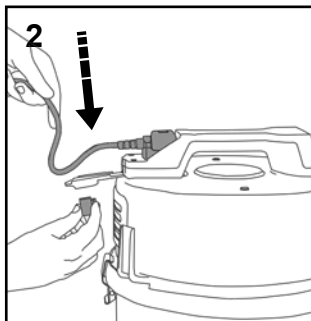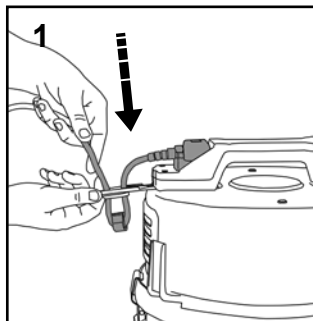           

(EN) About your machine

Rating Label

1	Company Name & Address
2	Model
3	Voltage/Alternating Current
4	Frequency
5	Rated Input Power
6	Weight
7	Ingress Protection
8	WEEE Logo
9	Protection Class 2 Symbol
10	Approval Mark
11	Machine yr/wk Serial Number

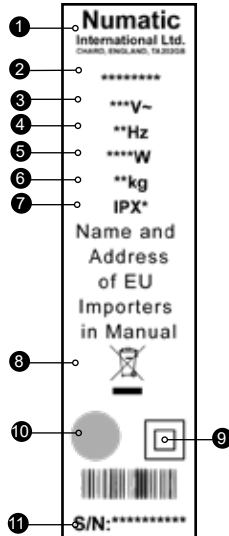 

Daily

Keep the machine clean, including hoses and tubes.

Ensure the bag and filter are fitted, (Dry use).

Empty dust bag if required.

Clean and check float safety valve for signs of damage.

Regularly examine the power cord.

Check filters are clean.

Weekly - as daily and:-

Check for any worn or damaged parts and replace immediately.

MAINTENANCE

WEEE Legislation (Waste, Electrical and Electronic Equipment)

Vacuum cleaner, accessories and packaging should be sorted for environmentally - friendly recycling.

(Only for EU Countries)

Do not dispose of vacuum cleaner into household waste! According to the European Directive 2012/19/EU on waste electrical and electronic equipment and its incorporation into national law.

Vacuum cleaners that are no longer suitable for use must be separately collected and sent for recovery in an environmentally - friendly manner.



PPE (personal protective equipment). That may be required for certain operations.

Ear Protection	Safety Footwear	Head Protection	Safety Gloves	
Eye Protection	Protective Clothing	Dust / Allergens Protection	Hi Viz Jacket	Caution Floor Sign

NOTE: A risk assessment should be conducted to determine which PPE should be worn.

Failure to rectify the problem or in the event of a breakdown contact your Numatic dealer or the Numatic Technical helpline +44 (0)1460 269268

Safety Critical Components

Mains leads:
H05VV-F 10 m x 2 Core x 1.0mm²
H05VV-F 10 m x 2 Core x 1.5mm²
(115v) H05VV-F 10 m x 2 Core x 2.5mm²

Warning

Read the instruction manual before using the machine.

Operators shall be adequately instructed on the use of these machines.

As with all electrical equipment, care and attention must be exercised at all times during use, in addition to ensuring that routine and preventative maintenance is carried out periodically to ensure safe operation. Failure to carry out maintenance as necessary, including the replacement of parts to the correct standard could render this equipment unsafe and the manufacturer can accept no responsibility in this respect.

The machine shall be disconnected from the mains power by removing the plug from the power supply socket during cleaning or maintenance and when replacing parts or converting the machine to another function.

This machine is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience or knowledge.

Children being supervised are NOT to play with the machine.

This appliance is intended to be assembled, cleaned and maintained by an adult.

This machine is not a toy.

This machine is not suitable for picking up hazardous or explosive dust. Contact your local distributor if you require a machine capable of performing these tasks.

Caution

If foam/liquid comes out of machine exhaust, switch off immediately.

Allow the accumulated liquid to drain out through the machine exhaust, check the float assembly to ensure correct operation, empty the container if full of liquid, reassemble the machine.

Immediately upon start up there will be a certain amount of liquid issuing from the machine exhaust which will be the residue of liquid still within the power head. This will be quickly discharged after which the machine should function normally.

Liquid ejected from the machine could be hazardous as a result of its temperature, pressure or chemical content.

Ensure that the filtration system fitted to the machine is suitable for the material being collected.

This machine is for indoor use only.

This machine shall be stored indoors only. .

When moving from one place to another, consider the weight of the machine.

Notes

You must ensure that the filtration system fitted to the machine is suitable for the material being collected.

This product complies with the requirements of clause 20 of IEC/EN 60335-2-69 Stability and Mechanical Hazards.

The primary use for this machine is commercial, for example in hotels, schools, hospitals, factories, shops and offices.

If the vacuum cleaner stops working, remove the plug from the power supply before investigating where the fault lies.

The vacuum cleaner should be inspected after use for damage.

The power light will illuminate, when your machine is connected to a suitable power supply (where fitted).

Do

- Use a bag and filter at all times when using 'dry'.
- Keep your machine clean.
- Keep filters clean.
- Regularly clean the water level limiting float safety valve and examine for signs of damage or correct operation.
- Keep hoses and tubes clear.
- Replace any worn or damaged parts immediately.
- Regularly examine the power cord, if damage is found, the power cord must be replaced by a special cord available from Numatic or its service agents.

Don't

- Use steam cleaners or pressure washers to clean the machine or use the machine in the rain.
- Immerse in water for cleaning.
- Allow any inexperienced repairs. Call the experts.
- Use wet if float valve is not functioning or fitted.
- Use to suck up hot ashes, or lighted cigarette ends.
- Run the machine over the power cable during operation as a hazard may occur.
- Pull on the cable to unplug the machine from the power supply.
- Walk over-wet carpets, upholstery or fabrics.
- Walk on clean carpets until fully dry.
- Attempt machine maintenance or cleaning unless the power supply plug has been removed from the supply outlet.
- Under any circumstances place foreign objects including (but not limited to) air fresheners, air freshener capsules or scented beads of any type into the top filter of the machine. Doing so can be dangerous and risk damage to the machine and may invalidate the machine warranty.

Dry Mode maintenance/fault finding

If the vacuum cleaner stops working switch off and remove the plug from the wall before investigating where the fault lies. If the vacuum cleaner will not pick up any debris from the surface, switch off and remove the plug from the wall, inspect the floor tool, wands and hose for blockages, if no blockages are found, the dust bag may be full if the dust bag is not full the filter may be blocked.

Wet mode

If the vacuum cleaner stops working switch off and remove the plug from the wall before investigating where the fault lies. If the vacuum cleaner has a blockage and will not pick up liquid, switch off and remove the plug from the wall, has the float valve operated, this will shut off the suction and the pitch of the vacuum motor will change. Remove the power head and empty the liquid out of the container, if the container is empty, check that the floor tool wands and hose are not blocked. Flush the system with clean water after use. After use always inspect the machine for damage.

	Motor	AirFlo (motor only)	Suction	Cleaning Range	Class
CV 570 CVD 570 CV 900 CVD 900	1060 W 1060 W x 2 1060 W 1060 W x 2	49 L/sec 98 L/sec 49 L/sec 98 L/sec	2400	26.8m	II
		Capacity Wet/dry	Size (mm)	Weight	Sound Pressure (LpA) Uncertainty (KpA)
CV 570 CVD 570 CV 900 CVD 900		13 L 13 L 30 L 30 L	415x415x645mm 415x415x645mm 490x800x880mm 490x800x880mm	16.3 kgs 18.5 kgs 25.2 kgs 27.7 kgs	73.6-79 dB (A) 0.5 dB


Spare Parts

NUMBER	ITEM	NOTES
207124	CARTRIDGE FILTER	REPLACEMENT ITEM
207124	(H10) CARTRIDGE FILTER	ACCESSORY ITEM
207126	MESH FILTER	REPLACEMENT ITEM
502988	FLOAT ASSEMBLY	REPLACEMENT ITEM

Wiring Diagram



 14" CV 570 / 900 - 240V / 120V

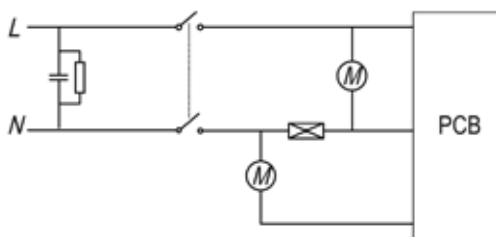

14" CVD 570 / 900 - 240V / 120V

Notes

EH	EC	CI	UE	ES:	Поискание за състояние	Добавяна информация

Manufacturer:	Numatic International Limited Chard TA20 2GB www.numatic.co.uk	Numatic	konformitetsdeklaration Declaration of conformity Västervätsdeklaration Déclaration de conformité	Declaración de conformidad Conformitéitsverklaring Samsvarserklæring Declaração de conformidade	Förskrivning Prescription Vastuistienmääräys Vastuistienmääräys	For skriftlig godkännande For skriftlig godkännande For skriftlig godkännande For skriftlig godkännande
Product:	WW, WVD, CV, CVD Vacuum Cleaner – Commercial – Wet & Dry					
Manufacturer:	Numatic International Limited Chard TA20 2GB www.numatic.co.uk	Numatic	konformitetsdeklaration Declaration of conformity Västervätsdeklaration Déclaration de conformité	Declaración de conformidad Conformitéitsverklaring Samsvarserklæring Declaração de conformidade	Förskrivning Prescription Vastuistienmääräys Vastuistienmääräys	For skriftlig godkännande For skriftlig godkännande For skriftlig godkännande For skriftlig godkännande

[illegible]

S.I. 2008: 1597	Supply of Machinery Regulations	EN60335-1:2012 + AC:2014 + A11:2014 + A13:2017 + A15:2021 EN60335-2-69:2012 EN62233:2008	CZ Vyšší, Nomatic problémujeme na svou výrobu odpovědnost. Je vše uvedeno výrobek je ve shodě s nálepkou (m) smloukou s normami.	EL Επίσης, Nomatic δηλώνουμε με αποκλειστική ευθύνη, ότι το προϊόν που αναφέρεται στο υπόδειγμα είναι σε πλήρη συμμόρφωση με τις σχετικές οδηγίες και πρότυπα.	PL Wyższe, Nomatic nie odpowiada za jakość wyprodukowanego, za wyjątek następującego produktu jest zgodny z wymaganiami dyrektywy i normami.	PT Nomatic, Nomatic declara sobe responsável pelo produto que se encontra no modelo, de acordo com as instruções.	RO Nomatic prezintă declarații cu privire la răspunderea, că produsul mai sus menționat este în conformitate cu cerințele și instrucțiunile aplicabile.	RU Мы, Nomatic, не отвечаем за качество продукции, за исключением продукции, указанной в образце.	SV Vi, Nomatic, förklarar härmed under eget ansvar att ovan nämnda produkt överensstämmer med följande direktiv och standarder.
		EN55014-1:2017 + A11:2020 EN55014-2:1997 + A1:2001 + A2:2008 EN61000-3-2:2014 EN61000-3-3:2013	DE Nomatic erklärt in alleiniger Verantwortung, dass das oben genannte Produkt den folgenden Richtlinien und Normen entspricht.	HU Mi, Nomatic, kizárólag, egyedül felelős azért, hogy a fent említett termék megfelel az előírt követelményeknek és szabványoknak.	IT Noi, Nomatic, dichiariamo sotto la propria responsabilità, che il prodotto di cui sopra è conforme alle seguenti direttive e norme.	LT Mes, Nomatic, prisiima atsakomybę už produktą, kuris yra pavaizduojamas pavyzdžioje.	LT Mes, Nomatic, prisiima atsakomybę už produktą, kuris yra pavaizduojamas pavyzdžioje.	LT Mes, Nomatic, prisiima atsakomybę už produktą, kuris yra pavaizduojamas pavyzdžioje.	LT Mes, Nomatic, prisiima atsakomybę už produktą, kuris yra pavaizduojamas pavyzdžioje.
		EN55014-1:2017 + A11:2020 EN55014-2:1997 + A1:2001 + A2:2008 EN61000-3-2:2014 EN61000-3-3:2013	ES Nosotros, Nomatic declaramos bajo nuestra única responsabilidad que el producto antes mencionado está en conformidad con las siguientes directivas y estándares.	ES Nosotros, Nomatic declaramos bajo nuestra única responsabilidad que el producto antes mencionado está en conformidad con las siguientes directivas y estándares.	ES Nosotros, Nomatic declaramos bajo nuestra única responsabilidad que el producto antes mencionado está en conformidad con las siguientes directivas y estándares.	ES Nosotros, Nomatic declaramos bajo nuestra única responsabilidad que el producto antes mencionado está en conformidad con las siguientes directivas y estándares.	ES Nosotros, Nomatic declaramos bajo nuestra única responsabilidad que el producto antes mencionado está en conformidad con las siguientes directivas y estándares.	ES Nosotros, Nomatic declaramos bajo nuestra única responsabilidad que el producto antes mencionado está en conformidad con las siguientes directivas y estándares.	ES Nosotros, Nomatic declaramos bajo nuestra única responsabilidad que el producto antes mencionado está en conformidad con las siguientes directivas y estándares.
S.I. 2012: 3032	RoHS Regulations								

Authorised Signatory: Mr. Matthew Coles

Numatic International Limited,
Chard,

Somerset, TA20 2GB, UK

Signed: *M. Cohen* Date: 2nd February 2024

2006/42/EC	Machinery Directive	EN60335-1:2012 + AC:2014 + A11:2014 + A13:2017 + A15:2021 EN60335-2-69:2012 EN62233:2008
2014/30/EU	EMC Directive	EN55014-1:2017 + A11:2020 EN55014-2:2017 + A1:2001 + A2:2008 EN55014-3:2017 EN61000-3-2:2013 EN61000-3-3:2013
2011/65/EU	RoHS Directive	

Authorised Signatory: Mr. Matthew Coles

Position: Head of Technology
Numatic International Limited
Chard.

Signed: *M. Cohen* Date: 2nd February 2024

Somerset, TA20 2GB, UK

DEC-010 V3.3



numatic.com

Numatic International Limited (Head Office)

Chard, Somerset TA20 2GB, UNITED KINGDOM

Tel: 01460 68600 numatic.com

Numatic International GmbH

Fränkische Straße 15-19, 30455 Hannover, DEUTSCHLAND

Tel: +49 (0) 511 984 2160 numatic.de

Numatic International Denmark

Fränkische Straße 15-19, 30455 Hannover, DEUTSCHLAND

Tel: +45 (0) 316 40808 numatic-online.dk

Numatic International S.A.S

13/17 rue du Valengelier, EAE la Tuilerie, 77500 Chelles, FRANCE

Tel: +33 (0) 164 726 161 numatic.fr

Numatic International BV

Vennootsweg 15, 2404 CG, Alphen aan den Rijn, NEDERLAND

Tel: +31 (0) 172 467 999 numatic.nl

Numatic International Schweiz AG.

Sihlbruggstrasse 3A, 6340 Baar, SCHWEIZ

Tel: +41 (0) 41 768 0760 numatic.ch

Numatic International (PTY) Ltd.

Cnr. 16th & Pharmaceutical Road, Randjes Park, Midrand 1685, SOUTH AFRICA

Tel: +27 (0) 861 686 284 numatic.co.za

Numatic International ULDA

Rua Francisco da Silva Duarte, n°79,

4475-269 Santa Maria de Avioso, Castelo da Maia, PORTUGAL

Tel: +351 220 047 700 numatic.pt

NUMATIC INTERNATIONAL SPAIN, S.L.U.

Av. Baix Llobregat, 5-7, Oficina bajos 1 (Parc Negocis Mas Blau II),

08820 El Prat de Llobregat (Barcelona) SPAIN

Tel: +34 93 647 22 22 numatic.es

Numatic International Italy S.R.L

Via Luigi Galvani, 2, Z.I. Talponedo, 33080 Porcia (PN), ITALY

Tel: +39 (0) 434 046 211 numatic.it

Specification subject to change without prior notice
numatic.com © Numatic International Limited